

INTRODUCTION

The scanner motor powers the physical movement of the scanning mechanism. This mechanism moves across an entire document, copying its contents, so that the printer can scan, fax, and/or print a copy of the original document. This motor may stop working due to a broken fuse or faulty connection and ultimately may need to be replaced.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Scanner Motor



- ⚠ Check that the printer is unplugged to prevent shock.
- Turn the printer so the front buttons are facing away from you.

Step 2



- Locate the 3mm Phillips #0 screw in the top left corner of the printer.
- Remove the screw using a Phillips head screwdriver.
- ⓘ Store the screw in a safe place where you can access them later.

Step 3




- Flip the top of the printer up so that you can see the inside of the printer.
- There is a white ribbon cable in the right top corner of the printer.
- Make sure that the white ribbon does not come detached from the right side of the printer.

Step 4



- Lay the scanner face up so you can access the under side, and place something, such as a piece of Styrofoam, underneath of it so that the white tape does not become detached.
- Locate the four 3mm Phillips #2 screws along the edge, and remove all of them.
- ⓘ Store the screws in a safe place where you can access them later.


Step 5

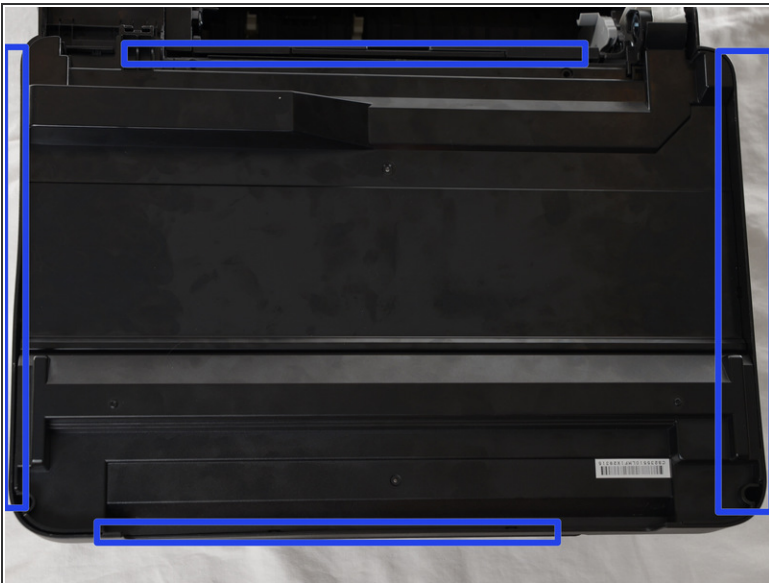


- Locate the seam on between outer shell of the printer and the inside of the printer.
- Starting from the top of the printer, use the plastic opening tool to slowly pry the scanner apart along the seam.

Step 6




- Detach the bottom of the scanner.
 - Flip the bottom of the scanner over so that it rests on top of the printer.
-  This gives you access to the motor.

Step 7

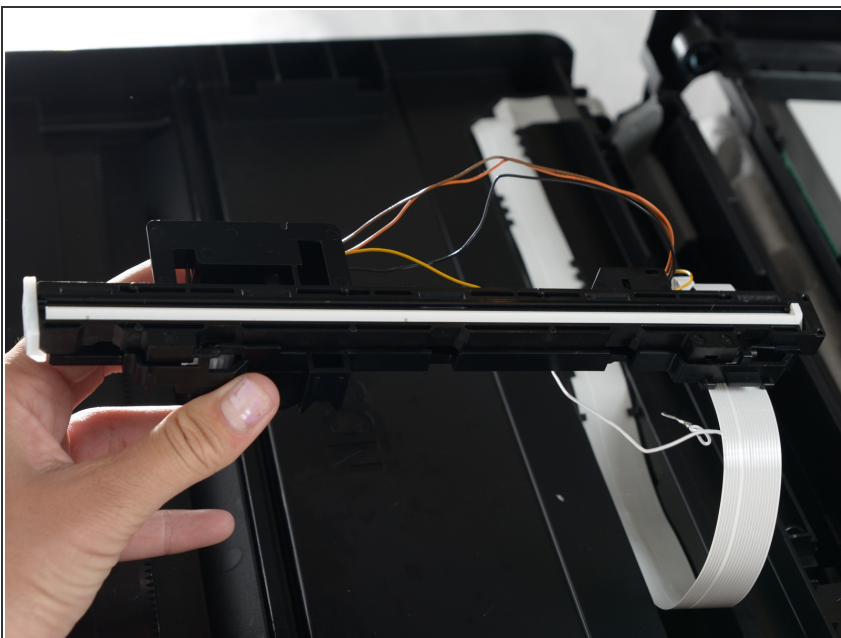

- Gently lift the scanner bar in order to remove it from the scanner.
- Detach the white ribbon cable from the scanner bar.

Step 8

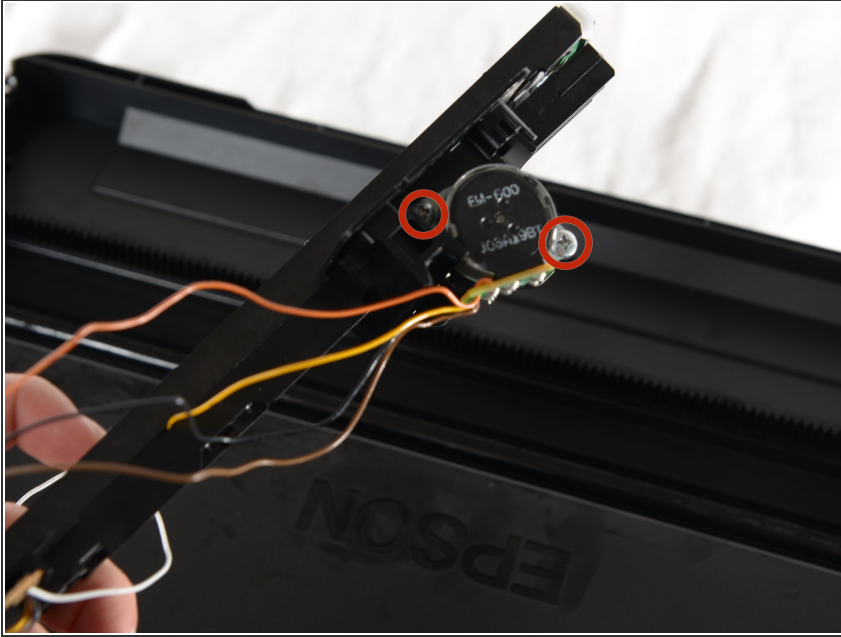

- Remove the two 3mm Phillips #2 screws on the underside of the scanner bar attached to the silver motor.
- Remove the motor from the scanner bar by gently pulling the motor upwards.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-12 12:35:17 PM.